

## MANUAL

### SOLAR LIGHT ATLAS

READ AND FOLLOW ALL INSTRUCTIONS BEFORE OPERATING YOUR SOLAR LIGHT.  
SAVE THIS MANUAL FOR FUTURE REFERENCE.

Thank you for purchasing the solar up down light. We are committed to offering the most effective home and garden solar lighting solution.

### PARTS CONTAINED

- 1) 1X Aluminum Solar Up Down Light
- 2) 1X Screws
- 3) 1X Instruction

### FEATURES

- 1) Solar panel: 5V,1.3W
- 2) Battery type: LI-ION 3.7V 2000mAh
- 3) Up Light:4 SMD LED
- 4) Down Light:4 SMD LED
- 5) Material:Aluminum lamp and PC diffuser
- 6) Working time:upto 12 hours

### OPERATION

For first time use, please let the switch not turn on and charge the battery for at least 8 hours.

Before installation, turn on the switch. The light turns on at night and turns off at daytime automatically. The battery can be charged no matter the switch is on or off.

### INSTALLATION

- Choose place where needs light at night and select a location where the unit will receive abundant sunlight during the day.
- Any cover or awning that shades the panel will affect the charging of the battery resulting in a shorter run time at night.
- Drill 2 holes on the wall according to the hole location from the wall mount and insert the dry anchors and screws.
- Slide the lamp down on the screws.
- The light should not be placed close to other bright lighting such as streetlights as the the solarlight may not turn on at night



## MANUAL

### BATTERY REPLACEMENT

The battery is 3.7V 2000mAh Li-ion rechargeable battery which is easily replaceable. If the battery begins to illuminate dimly or for short durations of time and you know that it has had sufficient sunlight on the panel, you should replace the battery in following way:

1. Take off the lamp from the wall
2. Open the bottom transparent cover carefully.
3. Remove the 2 screws on the plate without damaging cables.
4. Disjoin the old battery and replace a new battery.

**WARNING – Polarity is important. Wrong polarity is dangerous and will destroy the unit.**

